

 

 
 


 


 
 

 





 




Originalfernbedienung Ersatzfernbedienung

	System Power		Power
	Sleep		Sleep
	Disc Skip		Shift + Smart
	CD		Yellow
	Play		Play
	Pause		Pause
	Stop		Stop
	I<<		I<<
	>>I		>>I
	Tape		Green
	Shift		Menu
	Select 10		Info
	P.File		Ch +
	Tuner		Blue
	Phono		Red
	1		1
	2		2

Originalfernbedienung Ersatzfernbedienung

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10		0
	11		Guide
	12		Pre Ch
	13		AV
	14		Format
	15		3D
	16		Back
	Video 1		Smart
	Video 2		Media
	Video 3		Shift + Media



