



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv/Rad		TV/Radio /
	Search/*		Shift + Red / Netflix /
	Subtitle		Subtitle / EQ
	*		Setup / OPT /
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0

Originalfernbedienung Ersatzfernbedienung

	.../*		Display / Media
	Vol+		Vol+
	FAV//Quic Acces/*		Fav / Marker / PC
	CH+		CH+ / Page+
	Vol-		Vol-
	Guide		Guide / EPG / -/--
	CH-		CH- / Page-
	Mute		Mute / Dimmer
	Text		Text / Goto
	Home		Menu / Home
	T.Opt.		Shift + Setup / OPT / Tools
	Back		Back / Return
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	OK		OK
	Right		Right





Originalfernbedienung Ersatzfernbedienung

	AD/*		Audio / Lang I/II
	Down		Down
	Q.Menu/*		D.Menu / Top
	Movies		Picture / Format
	Rec/*		Rec / Rec Mode
	Stop		Stop / Hold
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

