


 



 

 


 



 
 
 
 


 

 
 
 

 
 



 
 


Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		T.Set/Clock	
Audio Out		Exit	
Slow Down		Menu Down	
Stop		Next	
Auto/Track		Audio	
Slow/Dpss-		Prev.	
Pause		1	
Video/Go-To		2	
Sp/Lp/Speed		3	
Mon/TV		4	
VCR/TV		5	
Menu		6	
Menu Up		Vps/Pdc	
Display		Encode	
Menu Left		7	
OK Enter		X2 Rew/Play	
Menu Right		P.Back/R.+Play	



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
8			
9			
-/--			
Audio Dub			
Record			
Counter Reset			
Counter Stop			
0			
Counter Clock			
Rewind			
F.Forward			
Play			
Progr/C/CH			
Show View			

