



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV/AV		AV / Input / RDS
	TV/TXT		Text / Goto
	Cancel		Shift + Exit / Cancel / Clear
	Reveal		Shift + Smart / List
	DTV		Setup / OPT /
	Hold		Stop / Hold
	Size		Zoom / Size
	Subpage		Shift + Display / Media
	Index		Display / Media
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	CH+		CH+ / Page+
	Menu		Menu / Home
	Vol+		Vol+

Originalfernbedienung Ersatzfernbedienung

	CH-		CH- / Page-
	Exit		Exit / Cancel / Clear
	Vol-		Vol-
	Channel List		Smart / List
	Mute		Mute / Dimmer
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	EPG		Guide / EPG / -/--
	Down		Down
	Info		Info / Angle
	1		1
	2		2
	3		3
	4		4
	5		5



