
 
 
 




 




 




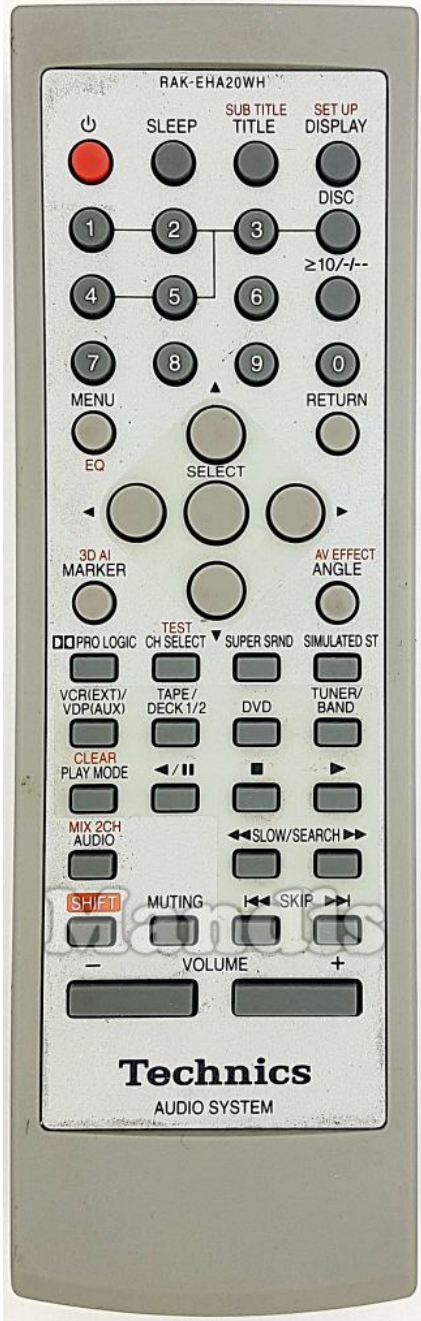 
Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	Title		TV/R
	Subtitle		Subt
	Display		Info
	Setup		Options
	Disc		Format
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	>10/-/--		Guide
	Menu		Menu
	EQ		Ch +
	Return		Back
	Marker		Smart
	3D AI		3D
	Angle		Red
	AV Effect		Shift + AV
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Select		Ok
	Prologic		Text
	CH Select		Pre Ch
	Test		List
	Super SNRD		D. Menu




Originalfernbedienung Ersatzfernbedienung

	Simulated ST		Ch -
	VCR(EXT)/VDP(AUX)		AV
	Tape/Deck 1/2		Green
	DVD		Blue
	Tuner/Band		Yellow
	Play Mode	+	Shift + Play
	Clear		Exit
	</Pause		Pause
	Stop		Stop
	Play		Play
	<< Slow/Search		<<
	Slow/Search >>		>>
	I<< Skip		I<<
	Skip >>I		>>I
	Audio		Dual
	Mix 2CH		Eject
	Shift		Media

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute

