 





 

 

 

 

 
 
 





















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Zoom		Zoom / Size
	SUB		Subtitle / EQ
	Timeshift		Shift + Sleep / Timer
	USB		Shift + 8
	TV/Radio		TV/Radio /
	TXT		Text / Goto
	PVRLIST		Smart / List
	Sleep		Sleep / Timer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold

Originalfernbedienung Ersatzfernbedienung

	Rec		Rec / Rec Mode
	Menu		Menu / Home
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	OK		OK
	Right		Right
	EPG		Guide / EPG / -/-
	Down		Down
	Info		Info / Angle
	I<<		I<< / Preset-
	Audio		Audio / Lang I/II
	<<		<< / Tune-
	>>I		>>I / Preset+
	SAT		Shift + 0
	>>		>> / Tune+
	1		1





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
2 ABC	2	DVD 2	2
3 DEF	3	CD - STB 3	3
4 GHI	4	VIDEO 4	4
5 JKL	5	TAPE 5	5
6 MNO	6	TUNER 6	6
7 PQRS	7	AUX - HDD 7	7
8 TUV	8	USB 8	8
9 WXYZ	9	BLUETOOTH 9	9
FAV	FAV	PC FAV MARKER	Fav / Marker / PC
0	0	HDMI - SAT 0	0
RECALL	Recall	RETURN BACK	Back / Return

