



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open / Close		Eject
	Card / USB		Media
	Subtitle		Subt
	Disc		Smart
	Language		Dual
	DVD / DVB		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	10+		Guide
	Repeat		Text
	A-B		D. Menu
	Zoom		Shift + Eject
	Setup		Options
	PBC		TV/R
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Title		List
	Menu		Menu
	Pause		Pause
	Slow		Shift + Play
	Resume		Shift + Stop
	<<		<<





Originalfernbedienung Ersatzfernbedienung

	>>		>>
	Play		Play
	I<<		I<<
	>>		>>
	Stop		Stop
	3D		3D
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Step	+	Shift + Pause
	OSD		Info
	L/R		Pre Ch
	Prog		Sleep
	Clear		Exit
	Goto		Back

Originalfernbedienung Ersatzfernbedienung

