











































 



 





 

 



 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Audio		Audio / Lang I/II
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Freeze		Pause / Step / Freeze
	0		0

Originalfernbedienung Ersatzfernbedienung

	Recall		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	OK / Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Info		Info / Angle
	CH+		CH+ / Page+
	Home		Shift + Menu /
	Vol+		Vol+



