


Originalfernbedienung Ersatzfernbedienung

	Reset		Exit / Cancel / Clear
	Power		Power
	Mute		Mute / Dimmer
	Vol+		Vol+
	Sub-		CH- / Page-
	Sub+		CH+ / Page+
	Vol-		Vol-
	Treble-		Down
	Treble+		Up
	Effect News		Info / Angle
	Effect Movie		Subtitle / EQ
	Effect Music		Sound / Title
	Source TV		AV / Input / RDS
	Source AUX		7
	Source OPTICAL		Setup / OPT /
	Source COAXIAL 1		1
	Source COAXIAL 2		2

Originalfernbedienung Ersatzfernbedienung

