

 








 










 
 






 


 

 
 
 












 




 

 

 


 
 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Sleep		Sleep
	Info		Info
	Zoom		Eject
	Menu		Menu
	Exit		Exit

Originalfernbedienung Ersatzfernbedienung

	Audio		Dual
	Tv/Radio		TV/R
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Replay		AV
	Subtitle		Subt





Originalfernbedienung Ersatzfernbedienung

	Teletext		Text
	Skip		3D
	FAV		Pre Ch
	Digest		Options
	<<		<<
	Play		Play
	Pause		Pause
	>>		>>
	Rec		Rec
	Stop		Stop
	P▲		>>I
	P▼		I<<<
	Guide		Guide
	Return		Back

Originalfernbedienung Ersatzfernbedienung

