



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Audio		Dual
	Sleep		Sleep
	Format		Format
	Source		AV
	Menu		Menu
	Exit		Exit
	Up / CH+		Up
	Up / CH+		Ch +
	Left / Vol-		Left
	Left / Vol-		Vol -
	OK / CH List		Ok
	Left / Vol+		Vol +
	Right / Vol+		Right
	Down / CH-		Ch -
	Down / CH-		Down

Originalfernbedienung Ersatzfernbedienung

	EPG		Guide
	i		Info
	OK / CH List		List
	Rec		Rec
	PVR		Smart
	P- / Pause		Shift + Ch -
	P+ / →I		Shift + Ch +
	Stop		Stop
	Play		Play
	Pause / Time Shift		Pause
	Time Shift		Shift + Pause
	Red / << /		Red
	Red / << /		<<
	Red / << /		TV/R
	Green / >> / Fav		Green
	Green / >> / Fav		>>
	Green / >> / Fav		Pre Ch







Originalfernbedienung Ersatzfernbedienung

	Yellow / SAT / <II		Yellow
	Yellow / SAT / <II		Media
	Blue / II> / +/-		Blue
	I<<		I<<
	>>I		>>I
	Repeat T1/T2	 + 	Shift + Text
	White / A-B		3D
	Subtitle		Subt
	Text		Text
	Dual screen		Options
	Zoom		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6

Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	9		9
	0		0
	?		D. Menu
	Recall		Back

