



**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Program		Sleep
	Subtitle/Copy		Subt
	Open/Close		Eject
	Display		Shift + Info
	Step		List
	↔/A-B		3D
	Repeat		Shift + Text
	V-Mode		Format
	N/P		D. Menu
	PBC		Shift + TV/R
	Zoom		Shift + Eject
	Text/Title		Text
	DVD/DVB		AV
	Tv/Radio		TV/R
	Audio		Dual
	Setup		Options

**Originalfernbedienung Ersatzfernbedienung**

	Return		Back
	Angle		Exit
	USB/Card		Smart
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Menu		Menu
	Play		Play
	Pause		Pause
	Stop/PVR		Stop
	EPG		Guide
	Info		Info
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute











**Originalfernbedienung   Ersatzfernbedienung**

	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10		0
	10+		Pre Ch
	Goto		Media
	<</Rev		<<
	>>/Fwd		>>
	I<</Prev		I<<
	>>I/Next		>>I
	Red		Red

**Originalfernbedienung   Ersatzfernbedienung**

	Green		Green
	Yellow		Yellow
	Blue/FAV		Blue

