 


 
 



 
 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0 / Zoom		0
	TV / Radio		TV/R
	Recall		Back
	Audio		Dual
	Menu		Menu
	i		Info

Originalfernbedienung Ersatzfernbedienung

	EPG		Guide
	TV / STB		Smart
	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	P-		Ch -
	P+		Ch +
	Vol-		Vol -
	Vol+		Vol +
	UHF		AV
	Red / PIP		Red
	Green / Text		Green
	Green / Text		Text
	Yellow / Subtitle		Yellow





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Yellow / Subtitle		Subt				
	Blue		Blue				
	Find		Shift + TV/R				
	Sleep		Sleep				
	White / P/N		3D				
	SAT		Media				
	FAV		Pre Ch				
	Folder		List				
	Tms		Format				
	Play		Play				
	Stop		Stop				
	Pause		Pause				
	Rec		Rec				
	<<		<<				
	>>		>>				
	<		I<<				
	>		>>I				

