


Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Red/Zoom		Red
	Green/00		Green
	Yellow		Yellow
	Blue		Blue
	Text		Text

Originalfernbedienung Ersatzfernbedienung

	Picture		Format
	AV		AV
	Menu		Menu
	PR+		Ch +
	Up		Up
	PR-		Ch -
	Down		Down
	Right		Right
	Vol+		Vol +
	Vol-		Vol -
	Left		Left
	Up VCR		Shift + Ch -
	UP [=]		Shift + Text
	Up DVD		Shift + Up
	Down VCR		Shift + Ch +
	Down DVD		Shift + Down
	<< VCR		Shift + <<



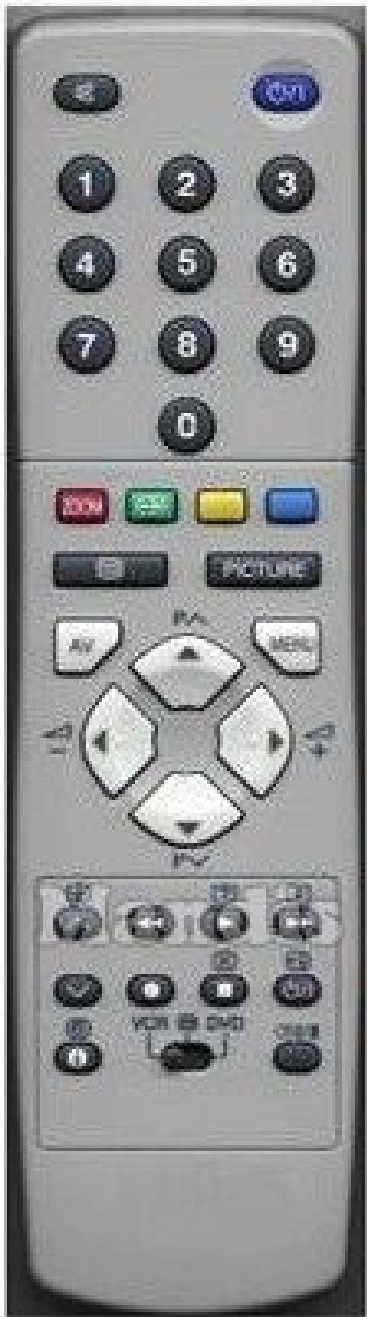

Originalfernbedienung Ersatzfernbedienung

	<< DVD		<<
	Play/[?] VCR	+	Shift + Play
	Play/[?] [≡]		Eject
	Play/[?] DVD		Play
	>>/[+] VCR	+	Shift + >>
	>>/[+] [≡]	+	Shift + Right
	>>/[+] DVD		>>
	Rec VCR	+	Shift + Rec
	Stop/[X] VCR	+	Shift + Stop
	Stop/[X] [≡]		Exit
	Stop/[X] DVD		Stop
	Standby/[≡i] VCR	+	Shift + Power
	Standby/[≡i] [≡]		Media
	Standby/[≡i] DVD		Smart
	i/Timer		Info
	O))/		Dual

Originalfernbedienung Ersatzfernbedienung