


Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Red/Zoom		Red
	Green/00		Green
	Yellow		Yellow
	Blue		Blue
	Text		Text

Originalfernbedienung Ersatzfernbedienung

	Picture		Format
	AV		AV
	Menu		Menu
	PR+		Ch +
	Up		Up
	PR-		Ch -
	Down		Down
	Right		Right
	Vol+		Vol +
	Vol-		Vol -
	Left		Left
	Up VCR		Shift + Ch -
	UP [=]		Shift + Text
	Up DVD		Shift + Up
	Down VCR		Shift + Ch +
	Down DVD		Shift + Down
	<< VCR		Shift + <<



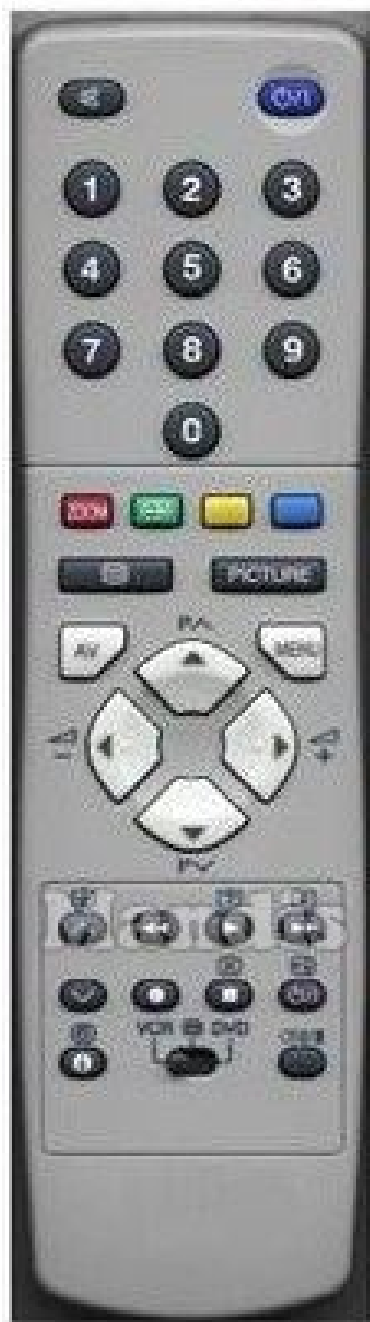

Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
<< DVD	<<		
Play/[?] VCR	+ Shift + Play		
Play/[?] [≡]	Eject		
Play/[?] DVD	Play		
>>/[+] VCR	+ Shift + >>		
>>/[+] [≡]	+ Shift + Right		
>>/[+] DVD	>>		
Rec VCR	+ Shift + Rec		
Stop/[X] VCR	+ Shift + Stop		
Stop/[X] [≡]	EXIT		
Stop/[X] DVD	Stop		
Standby/[≡i] VCR	+ Shift + Power		
Standby/[≡i] [≡]	MEDIA		
Standby/[≡i] DVD	SMART		
i/Timer	INFO		
O))/II	DUAL		

