






 




 


 



 


 
 






 













 




 


 

 



 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
			Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	Recall		Back
	Red		Red
	Green		Green
	Yellow		Yellow

Originalfernbedienung Ersatzfernbedienung

	Blue		Blue
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Mute		Mute
	TXT		Text
	Aspect		Format
	Audio		Shift + 3D
	Display		Info
	Sleep		Sleep
	Up / PR +		Up
	Up / PR +		Ch +
	Down / PR -		Down
	Down / PR -		Ch -
	Right / Vol +		Right
	Right / Vol +		Vol +
	Left / Vol -		Left
	Left / Vol -		Vol -





Originalfernbedienung Ersatzfernbedienung

	Enter		Ok
	Source		AV
	Menu		Menu
	Hold		Stop
	Mix		Shift + Text
	Subpage		Shift + Subt
	Size		Shift + Eject
	Index		3D
	Reveal		Media
	DTV/Radio		TV/R
	List		List
	EPG		Guide
	FAV		Pre Ch
	Page Down		I<<
	Page Up		>>I
	Still		Pause
	Subtitle		Subt

Originalfernbedienung Ersatzfernbedienung

