




 


 


 

 




Originalfernbedienung	Ersatzfernbedienung
 On	 Power
 D/SCART	 Source
 Off	 Shift + Power
 Memory	 Mode
 Color Mode	 Auto
 Menu	 Menu
 Aspect	 Eco / Aspect
 ESC	 Shift + Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Select	 Enter
 HDMI	 Vol + / Page +
 PC	 Vol - / Page -
 Compo	 Comp / Video
 Color Temp	 Freeze / Timer

Originalfernbedienung	Ersatzfernbedienung
 S-Video	 Volt / Focus
 Blank	 Blank / Mute
 Video	 Shift + Comp / Video
 Contrast	 - / Stop
 Gamma	 + / Play
 S.Tone	 Help / Info
 Pattern	 3D / Invert

