


 





 


 
 

 







 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Ambilight		Pre Ch
	Windows		Shift + Media
	Tv/Exit		Exit
	Rakuten Tv		TV/R
	Menu		Menu
	Netflix		Media
	Pair/Sources		AV
	Smart/Colors		Smart
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	←		Back
	→		Options
	Home		Shift + Smart

Originalfernbedienung Ersatzfernbedienung

	<<		<<
	Play		Play
	>>		>>
	Stop		Stop
	Pause		Pause
	Rec		Rec
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Tv Guide		Guide
	CH+		Ch +
	CH-		Ch -
	1		1





Originalfernbedienung Ersatzfernbedienung

2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
TEXT	Text	REPEAT TEXT	Text
≡	List	DISC NAV LIST	List

Originalfernbedienung Ersatzfernbedienung

