


 

 


 


 
 
 
 





 
 
 






**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Ambilight		Pre Ch
	Windows		Shift + Media
	Tv/Exit		Exit
	Rakuten Tv		TV/R
	Menu		Menu
	Netflix		Media
	Pair/Sources		AV
	Smart/Colors		Smart
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	←		Back
	+		Options
	Home		Shift + Smart

**Originalfernbedienung Ersatzfernbedienung**

	<<		<<
	Play		Play
	>>		>>
	Stop		Stop
	Pause		Pause
	Rec		Rec
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Tv Guide		Guide
	CH+		Ch +
	CH-		Ch -
	1		1





Originalfernbedienung    Ersatzfernbedienung

	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	List		List

Originalfernbedienung    Ersatzfernbedienung