








 
 




 








 


 

 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Guide		Guide
	CH List		List
	Red		Red
	Green		Green
	Yellow		Yellow

 
 


 

 
 
 
 



 


 

 

 


Originalfernbedienung Ersatzfernbedienung

	Blue		Blue
	[≡]		Menu
	Play		Play
	Pause		Pause
	Back		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Home		Smart
	CH+		Ch +
	CH-		Ch -





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
 Subtitle	 Subt
 Info	 Info
 TXT	 Text
 Music	 3D
 Free	 Options
 ART	 Dual
 Netflix	 Shift + Media
 Prime Video	 Format
 YouTube	 Shift + Smart
 Rakuten TV	 TV/R
 Media	 Media
 [++]	 D. Menu

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

