









 


 





 

 

 


 


 
 




 




 
 


 



 

 

 

 

 
 

 


 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Audio Lang. I/II		Dual
	Subtl		Subt
	EPG		Guide
	→ P ←		Format
	→ S ←		Shift + Dual

Originalfernbedienung Ersatzfernbedienung

	Fav		Shift + Pre Ch
	Size		Eject
	Vol+		Vol +
	Vol-		Vol -
	CH+ / Page+		Ch +
	CH- / Page-		Ch -
	QV Top		Smart
	Source		AV
	Menu		Menu
	Q.Menu		D. Menu
	Display		Info
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Exit		Exit







Originalfernbedienung Ersatzfernbedienung

	Red		Red
	FAV CH		Pre Ch
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Text / Play/Pause		Text
	Text / Play/Pause		Play
	Text / Play/Pause		Pause
	Index / Repeat		Shift + Text
	Index / Repeat		Shift + Info
	Cancel / Time		Back
	Cancel / Time		Shift + AV
	Hold / Stop		Stop
	Mix / Prev		I<<
	Subpg / Next		>>I
	Reveal / F.Rev		<<
	CEC / F.Fwd		>>

Originalfernbedienung Ersatzfernbedienung

	CEC / F.Fwd		Media

