


 

 

 









 



 

 

 



 

 











 



 





 











 


 




| Originalfernbedienung | Ersatzfernbedienung |
|---|---|
|  Power |  Power |
|  □□ |  Shift + 1 |
|  →• |  Shift + 2 |
|  ↓ |  Shift + 3 |
|  · |  Shift + 4 |
|  ▾ |  Shift + 5 |
|  ▾•▾ |  Shift + 6 |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |

| Originalfernbedienung | Ersatzfernbedienung |
|--|--|
|  1- |  Guide |
|  2- |  Pre Ch |
|  ? C/P |  Shift + Guide |
|  C/P |  Shift + Pre Ch |
|  Red / Sat |  Red |
|  Green+ / Memo |  Green |
|  Up / Size |  Up |
|  Yellow+ / +1 |  Yellow |
|  Blue / □← |  Blue |
|  Size |  Format |
|  Green- / Left / IN |  Left |
|  Green- / Left / IN |  Shift + Green |
|  Yellow- / Right / 01 |  Shift + Yellow |
|  Yellow- / Right / 01 |  Right |
|  Text / Mix / i |  Text |
|  Text / Mix / i |  Info |
|  Down |  Down |



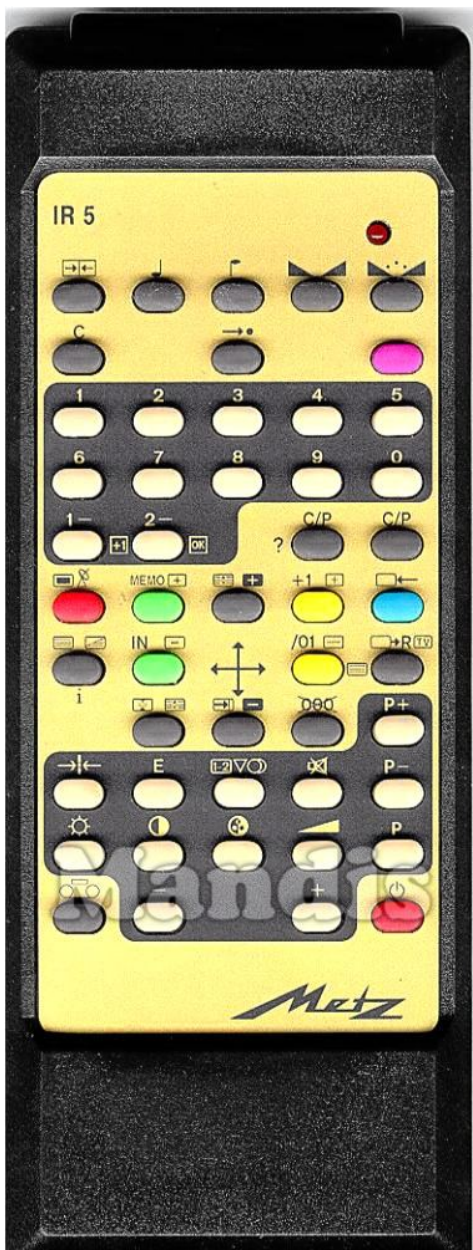

| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|---------------------|-----------------------|---------------------|
| | 000 | | |
| | P+ | | |
| | P- | | |
| | → ← | | |
| | C | | |
| | [1-2]VO | | |
| | E | | |
| | Mute | | |
| | * | | |
| | ⦿ | | |
| | ● | | |
| | ▲ | | |
| | + | | |
| | - | | |

