


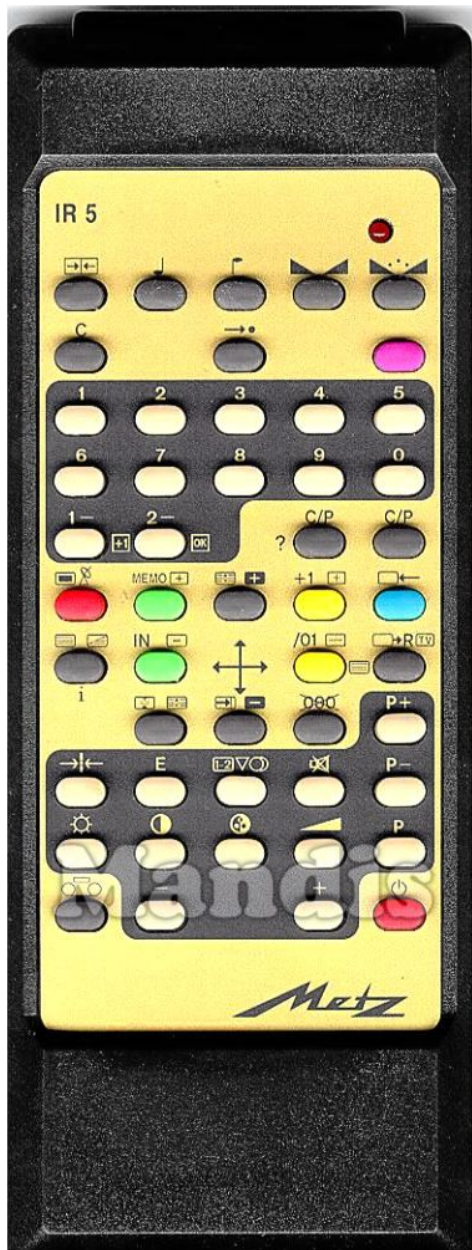

Originalfernbedienung	Ersatzfernbedienung
 Power	 Power
 □□	 Shift + 1
 →•	 Shift + 2
 ↓	 Shift + 3
 •	 Shift + 4
 ▾	 Shift + 5
 ▾•	 Shift + 6
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Originalfernbedienung	Ersatzfernbedienung
 1-	 Guide
 2-	 Pre Ch
 ? C/P	 Shift + Guide
 C/P	 Shift + Pre Ch
 Red / Sat	 Red
 Green+ / Memo	 Green
 Up / Size	 Up
 Yellow+ / +1	 Yellow
 Blue / □←	 Blue
 Size	 Format
 Green- / Left / IN	 Left
 Green- / Left / IN	 Shift + Green
 Yellow- / Right / 01	 Shift + Yellow
 Yellow- / Right / 01	 Right
 Text / Mix / i	 Text
 Text / Mix / i	 Info
 Down	 Down





Originalfernbedienung	Ersatzfernbedienung
	 +  Shift + 0
	 Ch +
	 Ch -
	 Smart
	 +  Shift + Exit
	 Dual
	 Exit
	 Mute
	 I<<
	
	
	 Subt
	 Vol +
	 Vol -

Originalfernbedienung	Ersatzfernbedienung

