 

 




 
 

 
 
 

 
 
 

 


 



 





 

 
 



 
 



 



 





 









 



 



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Red / S-Titres		Red
	Red / S-Titres		Subt
	Green / TTX		Green
	Green / TTX		Text
	Yellow / Audio		Yellow
	Yellow / Audio		Dual
	Blue / Timer		Blue
	Blue / Timer		AV
	Play / Pause		Play
	Play / Pause		Pause
	Stop		Stop
	Rec		Rec
	Enreg.		Smart
	EPG		Guide
	Info		Info





Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Quit		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0





Originalfernbedienung Ersatzfernbedienung

	TV / Radio		TV/R
	Fav		Pre Ch

Originalfernbedienung Ersatzfernbedienung

