








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	AUX		AV
	Tuner/Band		TV/R
	Preset Down		Ch -
	Preset Up		Ch +
	Program		Shift + Sleep
	Cancel		Exit
	Repeat		Text
	Disc		Guide
	Disc 1		1
	Disc 2		2
	Disc 3		3
	Disc 4		4
	Disc 5		5
	I<<		I<<
	>>I		>>I

Originalfernbedienung Ersatzfernbedienung

	Play		Play
	Pause		Pause
	Stop		Stop
	Deck 1/2 Tape		Smart
	<< Tape		Down
	>> Tape		Up
	< Tape		Left
	Stop Tape		Ok
	> Tape		Right
	V. Bass		Dual
	EQ Space On/Flat		Subt
	EQ Space Mode		Format
	Volume+		Vol +
	Volume-		Vol -
	Muting		Mute

