




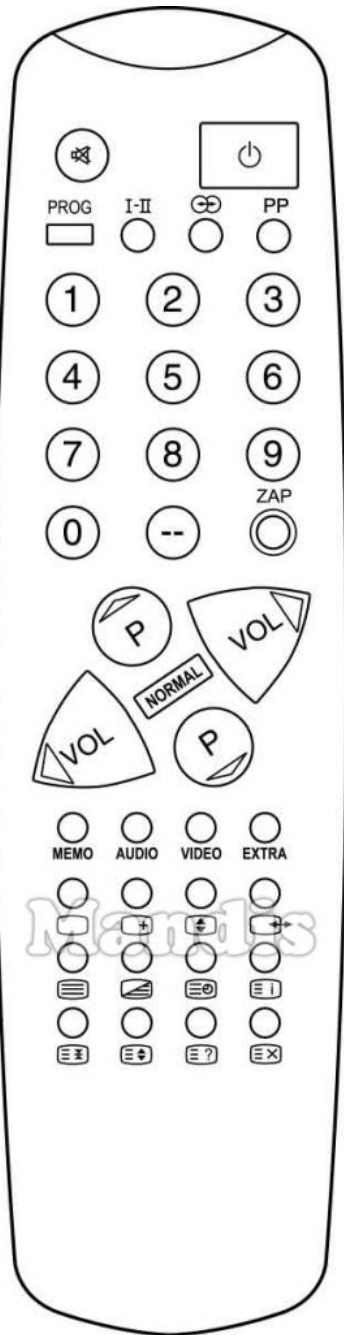
Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	Prog		TV/Radio /
	I-II		Audio / Lang I/II
	O to O		Sound / Title
	PP		Back / Return
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	--		Guide / EPG / --

Originalfernbedienung Ersatzfernbedienung

	ZAP		Smart / List
	Up / P+		Up
	Up / P+		CH+ / Page+
	Right / Vol+		Right
	Right / Vol+		Vol+
	Left / Vol-		Left
	Left / Vol-		Vol-
	Normal		OK
	Down / P-		Down
	Down / P-		CH- / Page-
	Red / Memo		Red / Netflix / Search
	Green / Audio		Green / APP / Repeat
	Green / Audio		Shift + Audio / Lang I/II
	Yellow / Video		Yellow / YouTube / Repeat
	Blue / Extra		Blue / Prime Video / Random
	[]		Display / Media
	[+]		Stop / Hold





Originalfernbedienung Ersatzfernbedienung

[⬢]	OPT-TOOLS SETUP	Setup / OPT /
[]↔	TOP MENU D.MENU	D.Menu / Top
[≡]	GOTO TEXT	Text / Goto
[/≡]	SHIFT + GOTO TEXT	Shift + Text /
[≡ Ⓞ]	EQ SUBTITLE	Subtitle / EQ
[≡ i]	ANGLE INFO	Info / Angle
[≡ □]	STEP-FREEZE II	Pause / Step / Freeze
[≡ ⬢]	SIZE ZOOM	Zoom / Size
[≡ ?]	RDS AV INPUT	AV / Input / RDS
[≡ X]	CLEAR EXIT CANCEL	Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung

