

 









 



 

 



 















Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|-----------------------|
|  | Open/Close |  | Eject / Surround |
|  | Video On/Off |  | Smart / List |
|  | Dimmer |  | Mute / Dimmer |
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | Clear |  | Exit / Cancel / Clear |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | +10 |  | Guide / EPG / -/-- |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Return |  | Back / Return |















 



 

 

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|-----------------------------|
|  | Program |  | TV/Radio / |
|  | Search |  | Red / Netflix / Search |
|  | Top Menu |  | D.Menu / Top |
|  | Setup |  | Setup / OPT / |
|  | Up |  | Up |
|  | Menu |  | Menu / Home |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Stop |  | Stop / Hold |
|  | Down |  | Down |
|  | Play |  | Play / Slow |
|  | I<< |  | I<< / Preset- |
|  | >>I |  | >>I / Preset+ |
|  | Random |  | Blue / Prime Video / Random |
|  | Pause |  | Pause / Step / Freeze |
|  | << |  | << / Tune- |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|----------------|--|---------------------------|
|  | >> |  | >> / Tune+ |
|  | F.Memo |  | Sleep / Timer |
|  | Video ADJ. |  | Picture / Format |
|  | A-B |  | Yellow / YouTube / Repeat |
|  | Repeat |  | Green / APP / Repeat |
|  | Display |  | Display / Media |
|  | Angle |  | Info / Angle |
|  | Subtitle |  | Subtitle / EQ |
|  | Audio |  | Audio / Lang I/II |
|  | Last Memo |  | Text / Goto |
|  | Condition Memo |  | AV / Input / RDS |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

