


 


 



 






 



 

 



 

 



 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Picture	 + 	Shift + Format
	Sound	 + 	Shift + Dual
	Aspect		Format
	Sleep		Sleep
	Subtitle		Subt
	CH.List		List
	FAV		Media
	TV/Radio		Pre Ch
	Input		TV/R
	Up		AV
	Left		Up
	Right		Left
	Down		Right
	OK		Down
	OK		Ok
	Right		Right
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	Exit		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Back
	Display		Info
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +



