 







Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------------|---|-----------|
|  | CD |  +  | Shift + 3 |
|  | 1 / Hall |  | 1 |
|  | TUNER |  +  | Shift + 6 |
|  | 2 / Jazz |  | 2 |
|  | MD/CD-R |  +  | Shift + 8 |
|  | 3 / Rock |  | 3 |
|  | DVD |  +  | Shift + 2 |
|  | 4 / Entertainment |  | 4 |
|  | D-TV/CBL |  +  | Shift + 1 |
|  | 5 / TV Sports |  | 5 |
|  | VCR 1 |  +  | Shift + 4 |
|  | 6 / Mono Movie |  | 6 |
|  | PHONO |  +  | Shift + 0 |
|  | 7 / Movie THTR 1 |  | 7 |
|  | V-AUX |  +  | Shift + 7 |
|  | 8 / Movie THTR 2 |  | 8 |
|  | VCR 2/DVR |  +  | Shift + 5 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------------|---|-----------------|
|  | 9 / Dolby / DTS Surr. |  | 9 |
|  | 0 |  | 0 |
|  | 6CH INPUT |  +  | Shift + 9 |
|  | Effect |  | Smart / List |
|  | Preset+ |  | >>I / Preset+ |
|  | Preset- |  | I<< / Preset- |
|  | Test |  | Text / Goto |
|  | Up |  | Up |
|  | A/B/C/D/E |  | Info / Angle |
|  | Left |  | Left |
|  | On Screen |  | Display / Media |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Level |  | Setup / OPT / |
|  | Down |  | Down |
|  | Set Menu |  | Menu / Home |
|  | Standby |  +  | Shift + Power |



