








 


 


 

 
 



 

 



 




 







 





 



 



 

 

 

 



 








 






 
 
 
 

 









 


 
 




Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Mute		Mute
	UHF		Options
	Antena		Smart
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Back
	i		Info
	Guide		Guide
	TV / Radio		TV/R
	Menu		Menu
	Audio		Dual
	Up / P+		Up
	Up / P+		Ch +
	Down / P-		Down
	Down / P-		Ch -
	Right / V+		Right
	Right / V+		Vol +
	Left / V-		Left
	Left / V-		Vol -
	OK / List		Ok
	FAV		Pre Ch
	Subtitle		Subt
	Exit		Exit
	Text		Text





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	<<		<<
	Play		Play
	>>		>>
	Step	 + 	Shift + Pause
	Stop / Live		Stop
	Rec		Rec
	Pause		Pause
	I<		I<<
	Archive		List
	>I		>>I
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	SAT		Media
	Hold	 + 	Shift + Stop

