
 

 

 

 

 

 

 

 











 



 
 



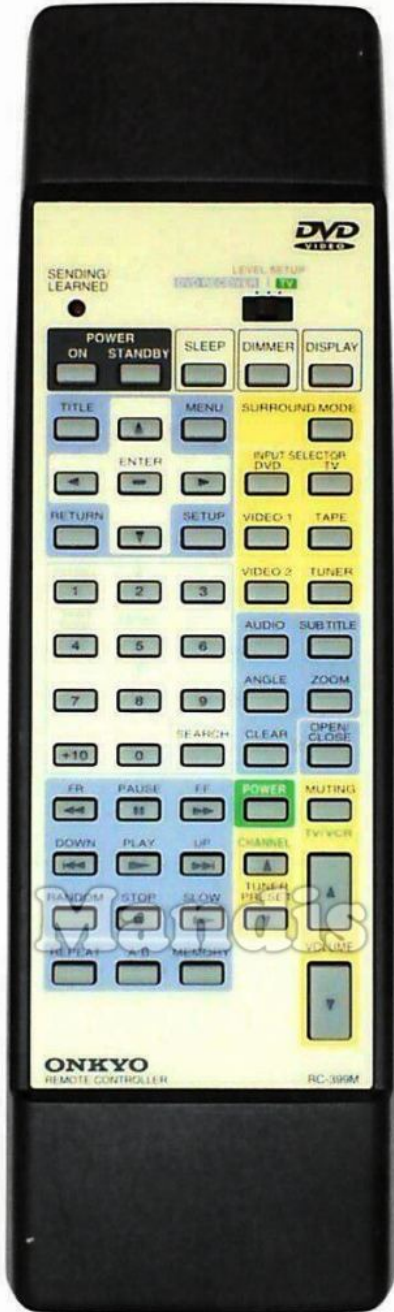 
Originalfernbedienung Ersatzfernbedienung

	Power On		Power
	Power Standby		Shift + Power
	Sleep		Sleep
	Dimmer		Shift + Mute
	Display		Info
	Title		List
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Return		Back
	Setup		Options
	Surround Mode		Smart
	Input Selector		Shift + 1
	Input Selector TV		Shift + 2

Originalfernbedienung Ersatzfernbedienung

	Input Selector VIDEO 1		Shift + 3
	Input Selector		Shift + 4
	Input Selector VIDEO 2		Shift + 5
	Input Selector TUNER		Shift + 6
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide
	Search		TV/R
	Audio		Dual














Originalfernbedienung Ersatzfernbedienung

	Subtitle		Subt
	Angle		Format
	Zoom		Shift + Eject
	Clear		Exit
	Open / Close		Eject
	<< FR		<<
	Pause		Pause
	>> FF		>>
	I<< Down		I<<
	Play		Play
	>>I Up		>>I
	Random		D. Menu
	Stop		Stop
	Slow		Shift + Play
	Repeat		Text
	A-B		Shift + Text
	Memory		Media

Originalfernbedienung Ersatzfernbedienung

	Tuner Preset+		Ch +
	Tuner Preset-		Ch -
	Muting		Mute
	Volume+		Vol +
	Volume-		Vol -

