 










Originalfernbedienung Ersatzfernbedienung

	On		Power
	Off	 + 	Shift + Power
	Tone		List
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Test		Smart
	Night		Exit
	DIM / [≡]		Text
	Sleep		Sleep
	SPKR/Menu		Menu
	Delay/Prev. CH.		Info
	CH./[≡?]		TV/R
	Digital/[≡X]		Media
	Up		Up
	Down		Down
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Mem/[≡◇]		Pre Ch
	Tun-M/[≡+]		Guide
	Tuning ▲		Ch +
	Tuning ▼		Ch -
	Direct/Green		Green
	Clear/Yellow		Yellow






Originalfernbedienung Ersatzfernbedienung

	Preset ▲		Shift + Ch +
	Preset ▼		Shift + Ch -
	OSD		Back
	RDS		Options
	OK		Ok
	Red		Red
	Blue		Blue
	AVR		Shift + 1
	DVD		Shift + 2
	CD		Shift + 3
	Tape		Shift + 4
	VID1		Shift + 5
	VID2		Shift + 6
	AUX		Shift + 7
	HDMI1		Shift + Red
	HDMI2		Shift + Green
	HDMI3		Shift + Yellow

Originalfernbedienung Ersatzfernbedienung

	AM/FM		Shift + 9
> DVD button" data-bbox="506 188 539 228"/>	> DVD		Play
	<< DVD		<<
	>> DVD		>>
	Stop DVD		Stop
	Pause DVD		Pause
	I<</Skip Down		I<<
	Skip Up/>>I		>>I

