 

 

 
 

 

 

 

 








 


 






 





Originalfernbedienung Ersatzfernbedienung

	Power Audio		Power
	Power Tv		Shift + Power
	Tv/Video		TV/R
	Eject		Eject
	Display		Info
	Dimmer		Smart
	Vol+ Audio		Vol +
	Vol- Audio		Vol -
	CH+ Tv		Ch +
	CH- Tv		Ch -
	> USB Memory		Red
	FM/AM		Green
	Line		Yellow
	Fade Muting		Mute
	K2		Blue
	Play DVD/CD		Play
	<</Slow-		<<

Originalfernbedienung Ersatzfernbedienung

	>>/Slow+		>>
	Stop		Stop
	Pause		Pause
	I<<		I<<
	>>I		>>I
	Up/Tuning+		Up
	Down/Tuning-		Down
	Right/Preset+		Right
	Left/Preset-		Left
	Enter		Ok
	Back		Back
	Repeat		Text
	Clock/Timer		Shift + AV
	Play Tuner		Guide
	I<< Group/Title		Shift + Ch -
	>>I Group/Title		Shift + Ch +
	Vol+ Tv		Shift + Right





Originalfernbedienung Ersatzfernbedienung

	Vol- Tv		Shift + Left
	Top Menu/PG		Shift + Menu
	Menu/PL		Menu
	Audio		Dual
	Subtitle		Subt
	Zoom		Shift + Eject
	Angle		3D
	Page		Shift + Media
	Return		Shift + Back
	Cancel		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0		0
	10/Tv Return		Shift + Guide
	+10/100+		Pre Ch
	Set Up		Media
	3D Phonic		AV
	HP Surround		Shift + Subt
	Clear Voice		List
	VFP		Options
	Scan Mode		Format
	QP Link		Shift + Smart
	Sleep		Sleep
	A.Standby		Shift + Red
	Output Level		Shift + 3D
	Input Level		Shift + TV/R
	S.WFR Out		Shift + Mute





Originalfernbedienung Ersatzfernbedienung

	DVD Level		D. Menu
	Treble+		Shift + 3
	Treble-		Shift + 6
	Bass+		Shift + 1
	Bass-		Shift + 4
	On Screen		Shift + Info

Originalfernbedienung Ersatzfernbedienung




Originalfernbedienung
Ersatzfernbedienung

	Power Tv		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10/Tv Return		Guide
	0		0
	+10/100+		Pre Ch
	Vol+ Tv		Vol +
	Vol- Tv		Vol -
	CH+ Tv		Ch +
	CH- Tv		Ch -

Originalfernbedienung
Ersatzfernbedienung

