



 




 

 

 





 
 
 

 




 






 
 
 

 


 

 
 
 





 


Originalfernbedienung	Ersatzfernbedienung		
	Power		Power
	1/2/3 CD		Yellow
	USB		Red
	Tuner		Green
	MP3 Link		Blue
	Dock/PC In		Smart
	Timer/Sleep		AV
	Clock		3D
	Mode		Format
	USB Record		Rec
	USB Delete		Media
	>>		>>
	<<		<<
	>		>>
	<		<<
	Play		Play
	Pause		Pause

Originalfernbedienung	Ersatzfernbedienung		
	Stop		Stop
	Prog		Sleep
	RDS/Display		Info
	ALB/Presets+		Ch +
	ALB/Presets-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Max		Options
	DSC		Dual
	VAC		Subt
	DBB/IS		TV/R



















 
 
 
 
 
 






**Originalfernbedienung    Ersatzfernbedienung**

	Power CD		Power
	Power MP3 Link	 + 	Shift + Power
	1/2/3 CD		Yellow
	USB		Red
	Tuner		Green
	MP3 Link		Blue
	Dock/PC In		Smart
	Timer/Sleep		AV
	Clock		3D
	Mode		Format
	USB Record		Rec
	USB Delete		Media
	>>		>>
	<<		<<
	>		>>
	<		<<
	Play		Play

**Originalfernbedienung    Ersatzfernbedienung**

	Pause		Pause
	Stop		Stop
	Prog		Sleep
	RDS/Display		Info
	ALB/Preset+		Ch +
	ALB/Preset-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Max		Options
	DSC		Dual
	VAC		Subt
	DBB/IS		TV/R





 




**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	1/2/3 CD		Yellow
	USB		Red
	Tuner		Green
	MP3 Link		Blue
	Dock/PC In		Smart
	Timer/Sleep		AV
	Clock		3D
	Mode		Format
	USB Record		Rec
	USB Delete		Media
	>>		>>
	<<		<<
	>		>>
	<		<<
	Play		Play
	Pause		Pause

**Originalfernbedienung    Ersatzfernbedienung**

	Stop		Stop
	Prog		Sleep
	RDS/Display		Info
	ALB/Preset+		Ch +
	ALB/Preset-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Max		Options
	DSC		Dual
	VAC		Subt
	DBB/IS		TV/R


 


 



 




**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	1/2/3 CD		Yellow
	USB		Red
	Tuner		Green
	MP3 Link		Blue
	Dock/PC In		Smart
	Timer/Sleep		AV
	Mode		Format
	Clock		3D
	USB Record		Rec
	USB Delete		Media
	<<		<<
	>		>>
	<		<<
	Play		Play
	Pause		Pause
	>>		>>

**Originalfernbedienung    Ersatzfernbedienung**

	Stop		Stop
	Prog		Sleep
	RDS/Display		Info
	ALB/Presets+		Ch +
	ALB/Presets-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Max		Options
	DSC		Dual
	VAC		Subt
	DBB/IS		TV/R

