


 

 

 
 
 


Originalfernbedienung	Ersatzfernbedienung
 Standby	 Power
 Auto Setup	 Auto
 Computer	 Vol - / Page -
 Video	 Shift + Video Comp / Video
 S-Video	 Vol + / Page +
 Component	 Comp / Video
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Select	 Enter
 Menu	 Menu
 Screen	 Eco / Aspect
 Keystone	 Shift + Up
 Info	 Help / Info
 Freeze	 Freeze / Timer
 Blank	 Blank / Mute

Originalfernbedienung	Ersatzfernbedienung
 P-Timer	 Shift + Freeze / Timer
 Lamp	 Mode
 Image	 3D / Invert
 D.Zoom+	 + / Play
 D.Zoom-	 - / Stop

