
 

 





 

 

 



 

 






 

 
 








| Originalfernbedienung | Ersatzfernbedienung |
|--|---|
|  Standby/On |  Power |
|  Open/Close |  Eject |
|  >>/Slow+ |  >> |
|  <</Slow- |  << |
|  Display |  Info |
|  On Screen |  3D |
|  Top Menu |  Shift + Menu |
|  Thumbnail/List |  List |
|  Menu |  Menu |
|  Set Up |  Options |
|  Up |  Up |
|  Down |  Down |
|  Right |  Right |
|  Left |  Left |
|  Enter |  Ok |
|  I<< |  I<< |
|  Play/Select |  Play |

| Originalfernbedienung | Ersatzfernbedienung |
|---|--|
|  >>I |  >>I |
|  Recall |  Pre Ch |
|  Stop/Clear |  Stop |
|  Pause |  Pause |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  X/Cancel |  Exit |
|  Return |  Back |
|  Title/Group |  Text |



