






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Mute		Mute / Dimmer
	0		0
	Tv/AV		AV / Input / RDS
	Timer Prog		TV/Radio /
	Clear/Reset		Exit / Cancel / Clear
	Menu		Menu / Home

Originalfernbedienung Ersatzfernbedienung

	OK		OK
	Left		Left
	Vol-		Vol-
	Up		Up
	PR+		CH+ / Page+
	Right		Right
	Vol+		Vol+
	PR-		CH- / Page-
	Down		Down
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Pause/Still		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec/ITR		Rec / Rec Mode
	Sleep		Sleep / Timer
	System		D.Menu / Top





Originalfernbedienung Ersatzfernbedienung

	Q.View		Display / Media
	Auto TRK		Subtitle / EQ
	TRK-		I<< / Preset-
	TRK+		>>I / Preset+
	Clock/Count		Smart / List
	SP/LP		Setup / OPT /
	[≡/ ]		Shift + Text /
	[≡o]		Shift + << /
	[≡?]		Shift + Pause / Step /
	Text		Text / Goto
	[≡♦]		Zoom / Size
	[≡+]		Shift + Stop /
	[≡x]		Shift + >> /
	[≡i]		Shift + Play /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat

Originalfernbedienung Ersatzfernbedienung

	Blue		Blue / Prime Video / Random
--	------	--	-----------------------------

