







































Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|-----------------------|
|  | Standby |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | Play / Size |  | Play / Slow |
|  | Pause / |  | Pause / Step / Freeze |
|  | Stop / Hold |  | Stop / Hold |
|  | << |  | << / Tune- |
|  | >> |  | >> / Tune+ |
|  | I<< |  | I<< / Preset- |
|  | >>I |  | >>I / Preset+ |
|  | S.Mode |  | Sound / Title |
|  | Audio |  | Audio / Lang I/II |
|  | Subtitle |  | Subtitle / EQ |
|  | Pic. Mode |  | Picture / Format |
|  | Sleep |  | Sleep / Timer |
|  | TV / Radio |  | TV/Radio / |
|  | Index |  | D.Menu / Top |
|  | Text |  | Text / Goto |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|-----------------------|
|  | Source |  | AV / Input / RDS |
|  | Menu |  | Menu / Home |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Exit |  | Exit / Cancel / Clear |
|  | Down |  | Down |
|  | Recall |  | Back / Return |
|  | Vol+ |  | Vol+ |
|  | CH. List |  | Smart / List |
|  | CH+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | Display |  | Display / Media |
|  | CH- |  | CH- / Page- |
|  | 1 |  | 1 |
|  | 2 |  | 2 |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--------|--|-----------------------------|
| | 3 | | 3 |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |
| | 0 | | 0 |
| | FAV | | Fav / Marker / PC |
| | Red | | Red / Netflix / Search |
| | Green | | Green / APP / Repeat |
| | Yellow | | Yellow / YouTube / Repeat |
| | Blue | | Blue / Prime Video / Random |
| | Aspect | | Shift + Picture / Format |
| | Home | | Shift + Menu / |
| | Reveal | | Shift + Back / Return |
| | Mouse | | Shift + Smart / List |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|----|--|-------------------------|
| | IE | | Shift + Display / Media |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

