 








 

 

 

 



 

 

 

 

 



 







Originalfernbedienung Ersatzfernbedienung

	Standby-On		Power
	Channel+		Ch +
	Channel-		Ch -
	Open / Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide
	Clear / C.Reset		Exit
	Display		Info

Originalfernbedienung Ersatzfernbedienung

	Speed / System		3D
	DVD		Smart
	T-Set		AV
	VCR		Media
	Play		Play
	<<		<<
	>>		>>
	Stop		Stop
	Rec / OTR		Rec
	I<< Skip		I<<
	Skip >>I		>>I
	Pause		Pause
	Top Menu		D. Menu
	Mode		List
	Search		TV/R
	Up		Up
	Left		Left





Originalfernbedienung Ersatzfernbedienung

	Enter		Ok
	Right		Right
	Down		Down
	Audio		Dual
	Menu		Menu
	Setup		Options
	Zoom	+	Shift + Eject
	Return		Back
	Subtitle		Subt
	Angle		Format
	Repeat		Text
	A-B	+	Shift + Text

Originalfernbedienung Ersatzfernbedienung

