





 

 

 

 



 

 





 












 





 
















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input TV		Shift + AV / Input / RDS
	Aspect		Picture / Format
	Input AV		AV / Input / RDS
	Option		Setup / OPT /
	Viera Link		Smart / List
	SD Card		D.Menu / Top
	Guide		Guide / EPG / -/-
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Menu		Menu / Home
	Return		Back / Return
	Red		Red / Netflix / Search

Originalfernbedienung Ersatzfernbedienung

	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Text		Text / Goto
	1		1
	[≡◆]/Sttl		Subtitle / EQ
	[≡i]/Index		Shift + Info / Angle
	[≡+]/Hold		Shift + Stop /
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0



