




Originalfernbedienung Ersatzfernbedienung

|                                                                                     |            |                                                                                     |                          |
|-------------------------------------------------------------------------------------|------------|-------------------------------------------------------------------------------------|--------------------------|
|    | Power      |    | Power                    |
|    | Input TV   |    | Shift + AV / Input / RDS |
|    | Aspect     |    | Picture / Format         |
|    | Input AV   |    | AV / Input / RDS         |
|    | Option     |    | Setup / OPT /            |
|    | Viera Link |    | Smart / List             |
|    | SD Card    |    | D.Menu / Top             |
|    | Guide      |    | Guide / EPG / -/-        |
|    | Exit       |    | Exit / Cancel / Clear    |
|   | Up         |   | Up                       |
|  | Left       |  | Left                     |
|  | OK         |  | OK                       |
|  | Right      |  | Right                    |
|  | Down       |  | Down                     |
|  | Menu       |  | Menu / Home              |
|  | Return     |  | Back / Return            |
|  | Red        |  | Red / Netflix / Search   |

Originalfernbedienung Ersatzfernbedienung

|                                                                                       |            |                                                                                       |                             |
|---------------------------------------------------------------------------------------|------------|---------------------------------------------------------------------------------------|-----------------------------|
|    | Green      |    | Green / APP / Repeat        |
|    | Yellow     |    | Yellow / YouTube / Repeat   |
|    | Blue       |    | Blue / Prime Video / Random |
|    | Text       |    | Text / Goto                 |
|    | 1          |    | 1                           |
|    | [≡♦]/Sttl  |    | Subtitle / EQ               |
|    | [≡i]/Index |    | Shift + Info / Angle        |
|    | [≡+]/Hold  |    | Shift + Stop /              |
|    | 2          |    | 2                           |
|   | 3          |   | 3                           |
|  | 4          |  | 4                           |
|  | 5          |  | 5                           |
|  | 6          |  | 6                           |
|  | 7          |  | 7                           |
|  | 8          |  | 8                           |
|  | 9          |  | 9                           |
|  | 0          |  | 0                           |



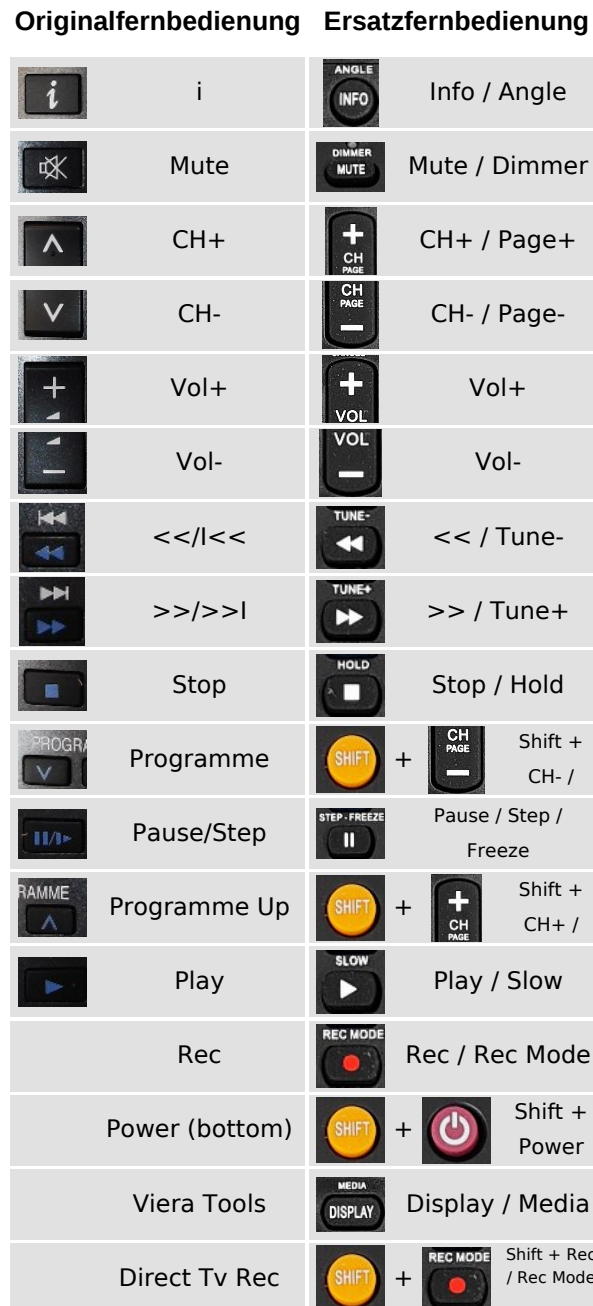

**Power** **DIMMER MUTE** **SHIFT**

**TV** **DVD** **SAT** **AUX**

SLOW STEP-FREEZE HOLD REC MODE

▶ || ◻ ●

TUNE- TUNE+ PRESET- PRESET+

◀ ▶ ◀ ▶

TITLE LANG UI EQ SURROUND

SOUND AUDIO SUBTITLE

FORMAT SIZE TIMER PROGRAM

PICTURE ZOOM SLEEP TV/RADIO

TOP MENU OPT-TOOLS GOTO RDS

D.MENU SETUP TEXT AV INPUT

**HOME** **ANGLE**

**MENU** **INFO**

◀ ▶

**OK**

◀ ▶

**CLEAR** **RETURN**

**EXIT** **BACK**

**CANCEL** **LIST**

**+** **SMART** **+**

**VOL** **MEDIA** **CH**

**—** **DISPLAY** **—**

**TV** **DVD** **CD-STB**

**1** **2** **3**

**VIDEO** **TAPE** **TUNER**

**4** **5** **6**

**AUX-HDD** **USB** **BLUETOOTH**

**7** **8** **9**

**—** **HDMI-SAT** **PC**

**GUIDE EPG** **0** **FAV MARKER**

**NETFLIX** **APP** **YouTube** **Prime Video**

**SEARCH** **REPEAT** **REPEAT A-S** **RANDOM**

**Mandis**  
shop  
www.mandis.tv