




 

 

 


 













 




 












 




 








 

 
 

 






Originalfernbedienung Ersatzfernbedienung

	CD		3
	Dolby Digital / DTS Sur.	 + 	Shift + Audio / Lang I/II
	TUNER		6
	Movie Thtr 1		1
	Tape/MD		5
	Movie Thtr 2	 + 	Shift + 2
	DVD/LD		2
	Mono Movie		Audio / Lang I/II
	D-TV		TV/Radio /
	TV Sports	 + 	Shift + Display / Media
	VCR		4
	Disco	 + 	Shift + 3
	PHONO		Sound / Title
	Rock	 + 	Shift + Smart / List
	CBL/SAT	 + 	Shift + AV / Input / RDS
	Hall		Smart / List
	V-AUX		AV / Input / RDS

Originalfernbedienung Ersatzfernbedienung

	Ext. Dec.		Exit / Cancel / Clear
	0		0
	A/B/C/D/E		Yellow / YouTube / Repeat
	Effect		D.Menu / Top
	Preset-		I<< / Preset-
	Preset+		>>I / Preset+
	Test		Text / Goto
	Up		Up
	Display		Display / Media
	Left		Left
	Enter		OK
	Right		Right
	Time / Level	 + 	Shift + Sleep / Timer
	Down		Down
	Set Menu		Setup / OPT /
	Standby	 + 	Shift + Power
	Power		Power



