



 
 

 


 





 
 


 
 

 











 
 
 

 

 




 

 
 

 
 
 
 
 
 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	VCR		Smart
	DVD		Media
	DVD Open / Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Return		Back
	Volume-		Vol -
	Volume+		Vol +

Originalfernbedienung Ersatzfernbedienung

	Sound		Dual
	Setup / Menu		Menu
	Up / CH+		Up
	Up / CH+		Ch +
	Down / CH-		Down
	Down / CH-		Ch -
	Right / Tracking+		Right
	Left / Tracking-		Left
	Enter		Ok
	Bass Boost		Shift + Ch +
	Surround		List
	Pause		Pause
	Play		Play
	Stop		Stop
	<< / Preset-		<<
	>> / Preset+		>>
	I<< / Tune-		I<<



