






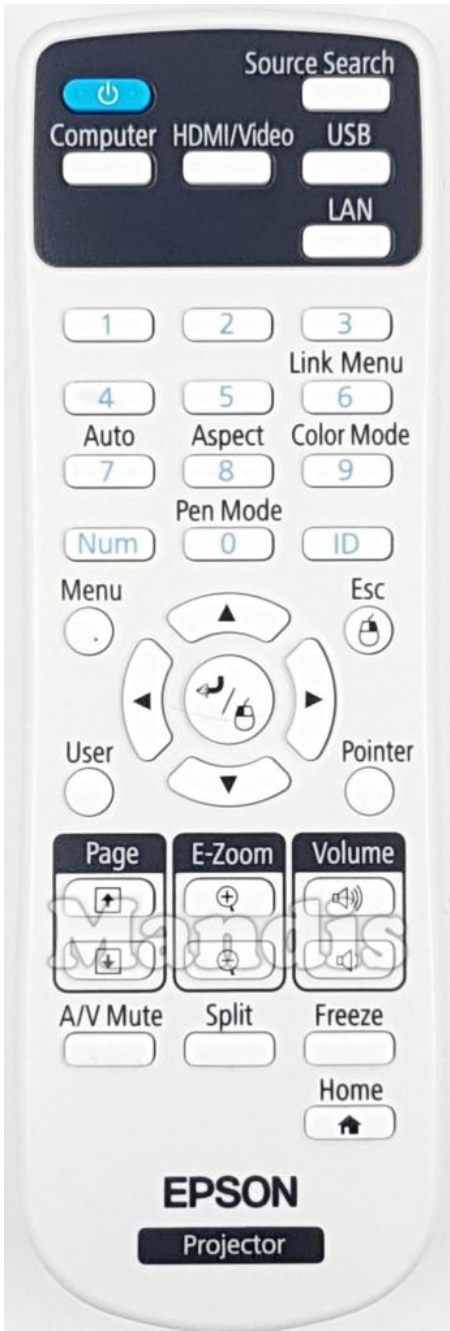
**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Source Search		Source
	Computer		Comp / Video
	HDMI/Video		Shift + Comp / Video
	Lan		Volt / Focus
	USB		3D / Invert
	Menu		Menu
	Auto		Auto
	Aspect		Eco / Aspect
	A/V Mute		Blank / Mute
	User		Shift + Up
	Color Mode		Mode
	Pen Mode		Shift + Source
	Link Menu		Shift + Menu
	Pointer		Shift + Down
	Freeze		Freeze / Timer
	Esc		Shift + Mode

**Originalfernbedienung Ersatzfernbedienung**

	Home		Shift + Power
	Split		Help / Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Enter
	Vol+		Vol + / Page +
	Vol-		Vol - / Page -
	E-Zoom+		+ / Play
	E-Zoom-		- / Stop
	Page Up		Shift + Vol + / Page +
	Page Down		Shift + Vol - / Page -
	1		Shift + Freeze / Timer
	2		Shift + + / Play
	3		Shift + Volt / Focus
	4		Shift + - / Stop





**Originalfernbedienung    Ersatzfernbedienung**

	5	+	Shift + Help /
	6	+	Shift + Eco / Aspect
	7	+	Shift + 3D /
	8	+	Shift + Blank / Mute
	9	+	Shift + Right
	0	+	Shift + Auto
	ID	+	Shift + Left

**Originalfernbedienung    Ersatzfernbedienung**