


 






















































Originalfernbedienung Ersatzfernbedienung

PWR On/Off		Power
Mute		Mute / Dimmer
Epg		Guide / EPG / -/--
Subt.List		Subtitle / EQ
Opt?		Setup / OPT /
App	 + 	Shift + Green / APP /
Sleep Timer		Sleep / Timer
TV		TV/Radio /
Info		Info / Angle
Video	 + 	Shift + 4
Text		Text / Goto
Zoom		Zoom / Size
TV/SAT		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Display		Display / Media
Menu Left		Left

Originalfernbedienung Ersatzfernbedienung

OK Enter		OK
Menu Right		Right
Exit		Exit / Cancel / Clear
Menu Down		Down
Back		Back / Return
Volume+		Vol+
Audio		Audio / Lang I/II
CH/Page+		CH+ / Page+
Volume-		Vol-
CH/Page-		CH- / Page-
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
8tuv	 8	Sys/Serv	 D.Menu / Top
9wxyz	 9		
Guide Pilote	 +  Shift + Guide / EPG / -/-		
0/10	 0		
FAV Pref.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
West	 I<< / Preset-		
Dev	 >>I / Preset+		
Freeze	 +  Shift + Pause / Step /		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
East	 Rec / Rec Mode		
Blue	 Blue / Prime Video / Random		
Dec/Pause	 Pause / Step / Freeze		
Lang./Rewind	 << / Tune-		
H/V Play	 Play / Slow		
LNB F.Forward	 >> / Tune+		

