 






 



 
 



 

 

 







 


 


 




 

 
 


 


 





 


 

 


 


 

 



**Originalfernbedienung Ersatzfernbedienung**

	Standby		Power
	Input/Tuner		AV
	Open/Close		Eject
	Optical		Options
	Display		Info
	Menu		Menu
	Home Menu		Smart
	Preset Up		Ch +
	Preset Down		Ch -
	Up		Up
	Down		Down
	Enter		Ok
	Return		Back
	BT Audio		Format
	Stop		Stop
	PopUp/Top		D. Menu
	Play		Play










 



 



 



 

 

 




 
 


**Originalfernbedienung Ersatzfernbedienung**

	Pause/Step		Pause
	>>		>>
	<<		<<
	<<		<<
	>>		>>
	SPK Level		TV/R
	Right/Tune+		Right
	Left/Tune-		Left
	Vol+		Vol +
	Vol-		Vol -
	USB Rec		Rec
	Mute		Mute
	Sound		Dual
	1		1
	2		2
	3		3
	4		4





**Originalfernbedienung   Ersatzfernbedienung**

	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Marker		Subt
	Search		Shift + TV/R
	Repeat		Text
	Zoom		Shift + Eject
	Clear		Exit
	Red/RDS		Red
	Green/PTY		Green
	Yellow/PTY Search		Yellow
	Blue/ST/Mono		Blue
	Dimmer		Guide
	Sleep		Sleep

**Originalfernbedienung   Ersatzfernbedienung**

	Power Tv		Shift + Power
	Input Tv		Media
	CH+ Tv		Shift + Ch +
	CH- Tv		Shift + Ch -
	Vol+ Tv		Shift + Right
	Vol- Tv		Shift + Left

