
 

 


 
 
 
 
 
 
 
 
 

 

 


 
 

 

 

 
 
 

 
 
 













Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Power	
Mute		Mute	
Update		Smart	
Reveal		List	
Txt Stop		Stop	
Info		Info	
Subt.List		Subt	
Sleep Timer		Sleep	
Return TV		TV/R	
Menu video		D. Menu	
Text		Text	
Txt Expand		Eject	
TV/AV		AV	
Menu		Menu	
Menu Up		Up	
Display	 + 	Shift + Info	
Menu Left		Left	
OK Enter		Ok	
Menu Right		Right	
Menu Off		Exit	
Menu Down		Down	
Back		Back	
Volume+		Vol +	
Chan.Up		Ch +	
Volume-		Vol -	
Menu audio		Dual	
Chan.Down		Ch -	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
8		8	
9		9	
Guide -/-- 1.		Guide	
0/10		0	
2.Fav P/C 2.		Pre Ch	
Red		Red	
Green		Green	
Game Coo		Options	
Yellow		Yellow	
Blue		Blue	
Off/Tim		Pause	
On/Tim		Play	
Audio-		I<<	
Audio+		>>I	
Tone-		<<	
Tone+		>>	
Color+ P.Std		Format	
AV 2		Shift + AV	
Browse		Media	
Contrast+		Shift + Ch +	
Color- S.Std		Shift + Dual	
Contrast-		Shift + Ch -	
Surround		Shift + Red	
Nicam/Mono		Shift + Green	
Level L		Shift + Yellow	
Level R/Woofer		Shift + Blue	

