 




Originalfernbedienung Ersatzfernbedienung

	DVD		Power
	Tv Standby/On		Shift + Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv/DVD		TV/R
	Audio		Dual
	DVD		Smart
	HDD		Media
	Input		AV

Originalfernbedienung Ersatzfernbedienung

	Tv Vol+		Vol +
	Tv Vol-		Vol -
	Prog Up		Ch +
	Prog Down		Ch -
	Open/Close		Eject
	CM Skip		Yellow
	I<<		I<<
	<		Shift + Left
	>		Shift + Right
	>>		>>
	<<		<<
	Stop		Stop
	Play/Pause		Play
	>>		>>
	Title List/Disc Menu		D. Menu
	Menu		Menu
	Anykey		Red



