



Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	ATV/DTV		Eject / Surround
	Power		Power
	1		1
	2		2
	3		3
	CH+		CH+ / Page+
	4		4
	5		5
	6		6
	CH-		CH- / Page-
	7		7
	8		8
	9		9
	Vol+		Vol+
	Guide		Guide / EPG / -/--
	0		0

Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep / Timer
	Vol-		Vol-
	Text		Text / Goto
	Text Subpage		Setup / OPT /
	CH. List		Smart / List
	Subtitle		Subtitle / EQ
	I-II		Audio / Lang I/II
	P.Size		Zoom / Size
	P.Mode		Picture / Format
	Exit		Exit / Cancel / Clear
	Up		Up
	Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	Info		Info / Angle
	Down		Down




Originalfernbedienung Ersatzfernbedienung

	Source		AV / Input / RDS
	Text Index		+  Shift + Text /
	Text Reveal		D.Menu / Top
	Text Size		+  Shift + Zoom /
	Text Hold		Pause / Step / Freeze
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

