


 













 





 













Originalfernbedienung Ersatzfernbedienung

	Power TV-SAT		Power
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Menu		Menu
	Guide		Guide
	Exit		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	9		9
	0		0
	Volume+ Tv		Vol +
	Volume- Tv		Vol -
	CH+ Tv Control		Ch +
	CH- Tv Control		Ch -
	TV/SAT		Media
	Front		Smart
	Power Front		Shift + Power
	Play Front		Play
	>> Front		>>
	<< Front		<<
	Pause Front		Pause
	Stop Front		Stop
	Enter Down		3D
	Input Select		AV
	1 Front		Shift + 1





Originalfernbedienung Ersatzfernbedienung








 





 


 
 

 





 








2	2 Front	SHIFT + 2	Shift + 2
3	3 Front	SHIFT + 3	Shift + 3
4	4 Front	SHIFT + 4	Shift + 4
5	5 Front	SHIFT + 5	Shift + 5
6	6 Front	SHIFT + 6	Shift + 6
7	7 Front	SHIFT + 7	Shift + 7
8	8 Front	SHIFT + 8	Shift + 8
9	9 Front	SHIFT + 9	Shift + 9
0	0 Front	SHIFT + 0	Shift + 0
+	Channel+ Front	SHIFT + +	Shift + Ch +
-	Channel- Front	SHIFT + -	Shift + Ch -

Originalfernbedienung Ersatzfernbedienung







 

 








 







 
 
 




Originalfernbedienung Ersatzfernbedienung

 SOURCE	Power DVD		Power
	Master		Vol +
	Master Volume-		Vol -
	Mute		Mute
	Menu		Menu
	Top Menu		Shift + Menu
	Subtitle		Subt
	Audio		Dual
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Play		Play
	<<		<<
	>>		>>
	I<<		I<<

Originalfernbedienung Ersatzfernbedienung

	Pause		Pause
	Stop		Stop
	>>I		>>I
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	·/+10		Pre Ch


 
 

 
 
 

 




 
 


 

 




Originalfernbedienung Ersatzfernbedienung

	Power FM-AM		Power
	Master		Vol +
	Master Volume-		Vol -
	Mute		Mute
	Display		Info
	T.Edit		Smart
	RF ATT		Media
	EON		List
	Tune+		Up
	Tune-		Down
	ST+		Right
	ST-		Left
	Enter		Ok
	D.Access		Blue
	MPX		Yellow
	Class		Green
	Search		TV/R

Originalfernbedienung Ersatzfernbedienung

	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0


 




 




 
 


 
 



 




Originalfernbedienung Ersatzfernbedienung

	Power Receiver		Power
	Signal Select		Smart
	Power DVR-VCR		Shift + Power
	DVD		Shift + 1
	TV/SAT		Shift + 5
	Front		Shift + 4
	Sleep		Sleep
	DVR/VCR		Shift + 2
	FM/AM		Shift + 3
	Dimmer		Media
	Auto		D. Menu
	Surround		Dual
	Advanced		Subt
	Sound Mode		Format
	Setup		Options
	Test Tone		Text
	CH. Select		3D

Originalfernbedienung Ersatzfernbedienung

	Room Setup		Red
	Mute		Mute
	-		Green
	+		Yellow
	Enter (Up)		Shift + Pre Ch
	Master Volume-		Vol -
	Master		Vol +
	P+		Ch +
	Up/Tune+		Up
	Menu		Menu
	Left/ST-		Left
	Enter		Ok
	Right/ST+		Right
	P-		Ch -
	Down/Tune-		Down
	Guide		Guide
	<<		<<


 

 

 




Originalfernbedienung Ersatzfernbedienung

	Play		Play
	>>/A		>>
	I<</B		I<<
	Pause/C		Pause
	Stop/D		Stop
	>>/E		>>I
	1		1
	2		2
	3		3
	Enter Down		AV
	4		4
	5		5
	6		6
	·/+10		Pre Ch
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	0		0
	Channel+		Shift + Ch +
	Channel-		Shift + Ch -

